

# RAPISCAN Scanning Instructions

## 1. Setup Model 6190 & 231

- Top: 231
- Bottom: 6190




## 2. Systems boot up & login

- Plug in "**USB Key**" in the front before turning on
- Turn the key -> press the button




- **Login:** SERVICE2
- **Password:** RS92050

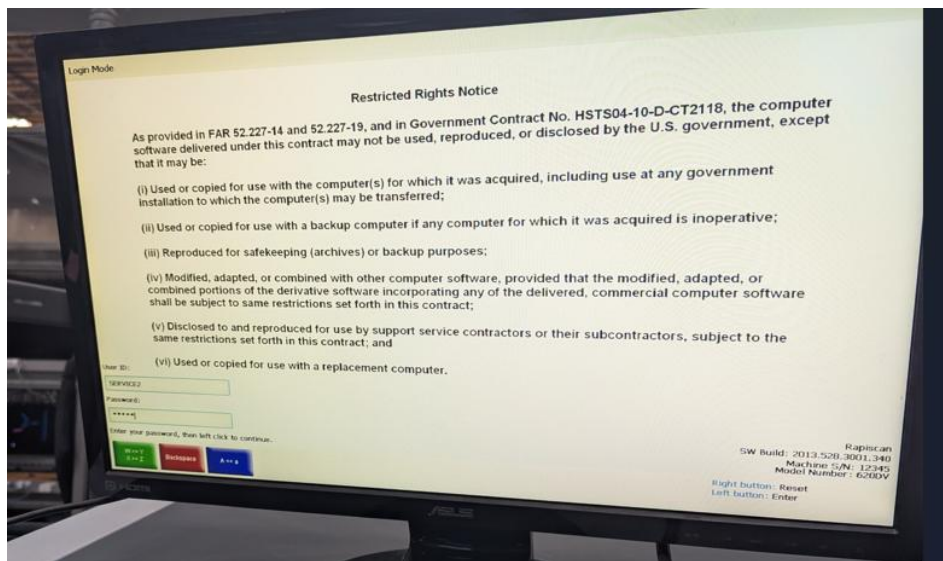

- Make sure **the object scanning** will be on the left side because the Xray machine will move the object from left to right automatically after login (if package in the right side, it will be drop)




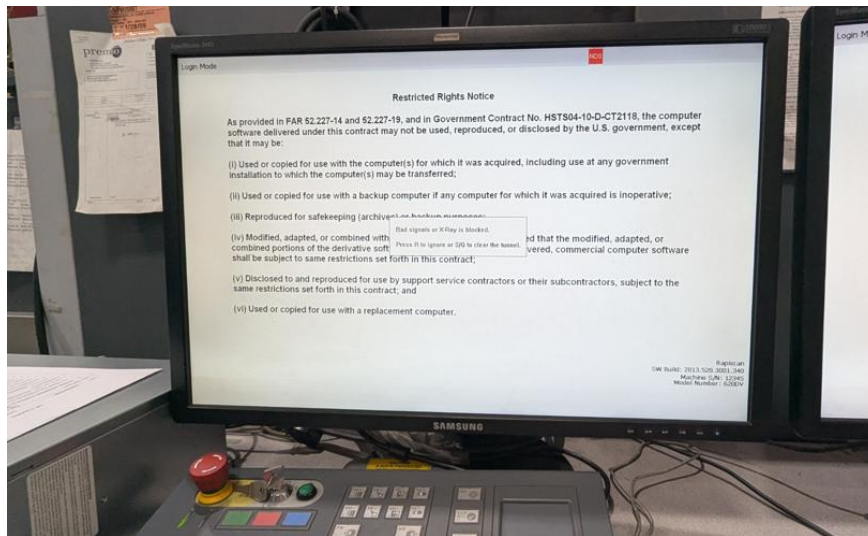

(just let the Xray machine run, it will move from left to right)


### 3. Xray scanning SW Configuration

- Select **"Main Conveyor"** -> **"Swap"** + **"Bi-directional"**

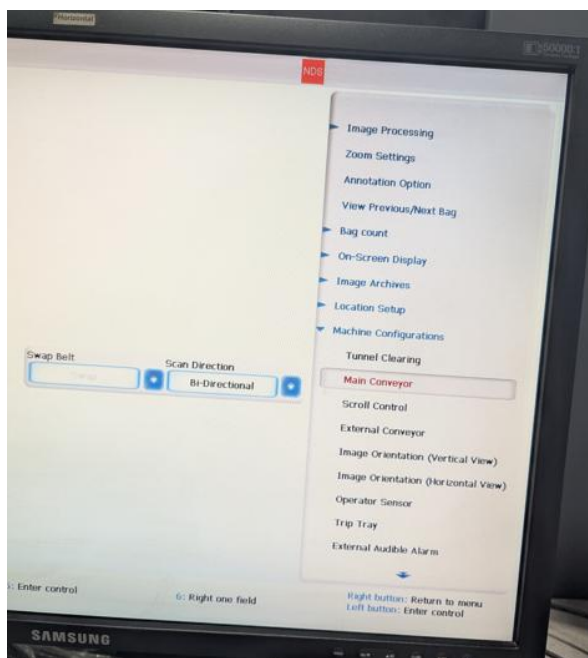

- At this time, the package will be on the right side



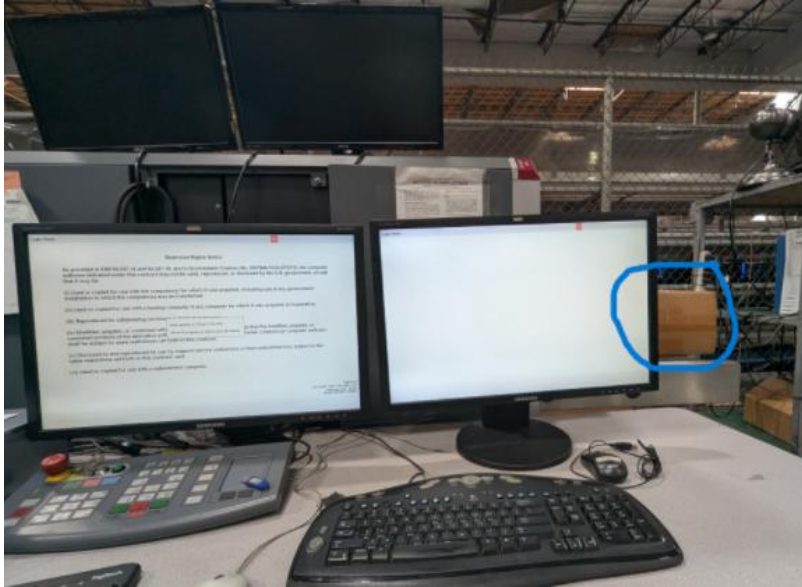


- Press the **left green button** to move the object then **right green button** to move the object back and forth (do it 7 times)



- Move the object back and forth about 7 times




- The last time the object should be on the right side

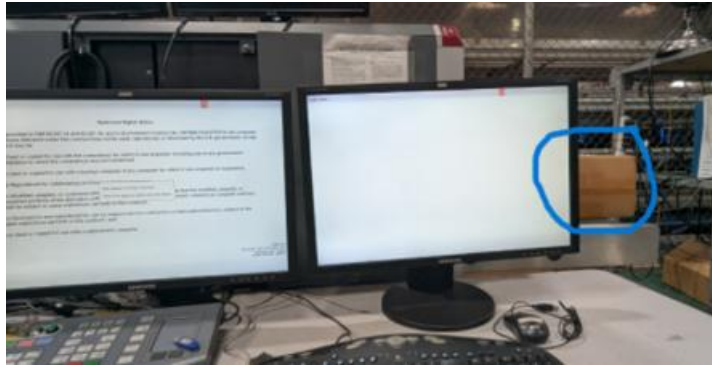


#### 4. Review of the Xray Images


- Review Xray Image -> Select **"Image Archives"** -> **"Review Auto Archives"**  
then Xray machine will automatically move the object to the left side

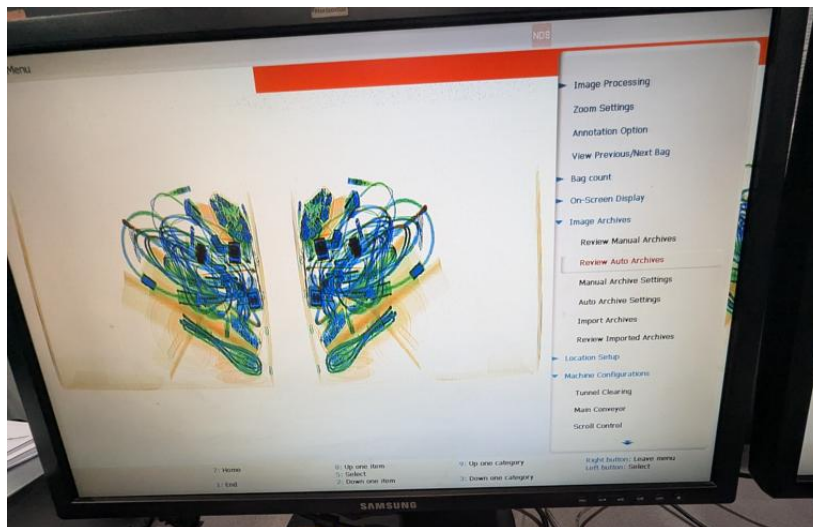

- Click OK then review the image

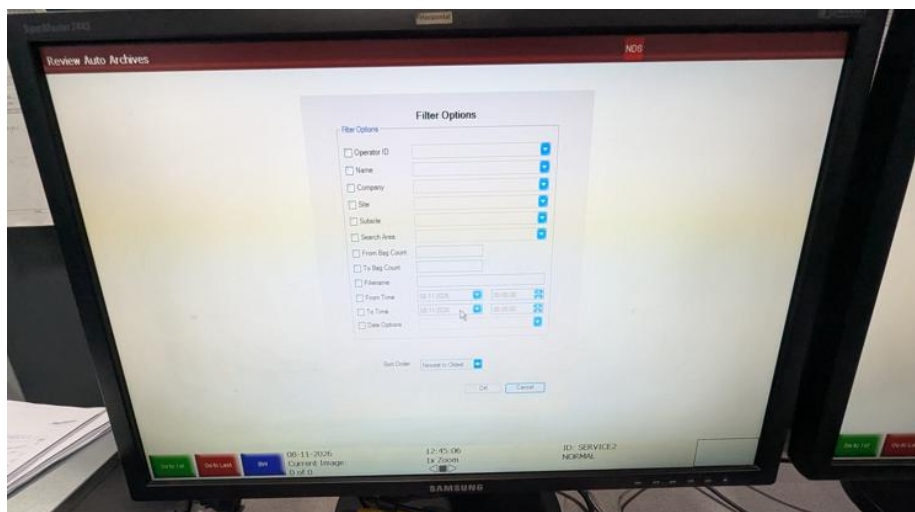

- Using **Right green button** to review the image

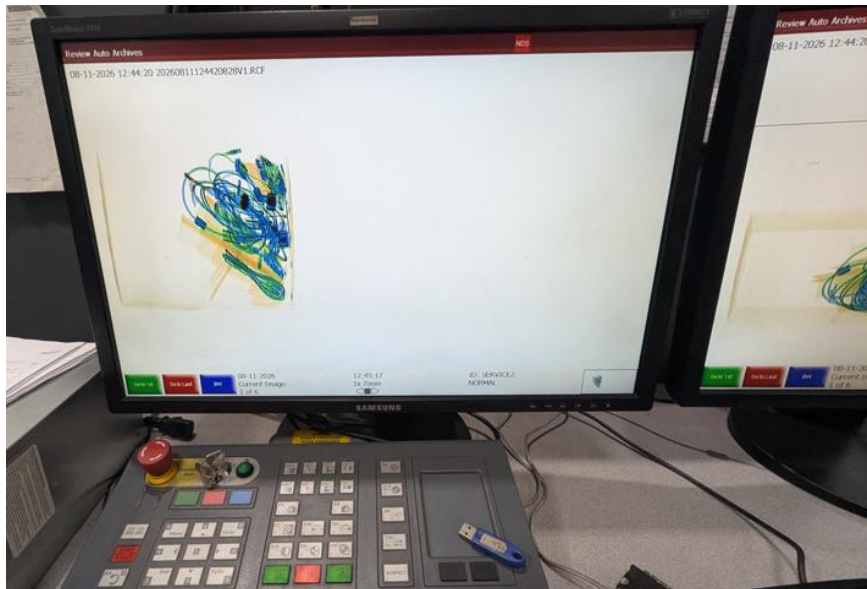


- Press these buttons to review all the screen modes



- After done reviewing the image, Exit the review mode -> select **“Exit Archive Reviewer Mode”**

## 5. Reset SW Xray Configuration

- Reset the machine configuration -> Main Conveyor -> **“un-swap” & “uni-bidirection”**

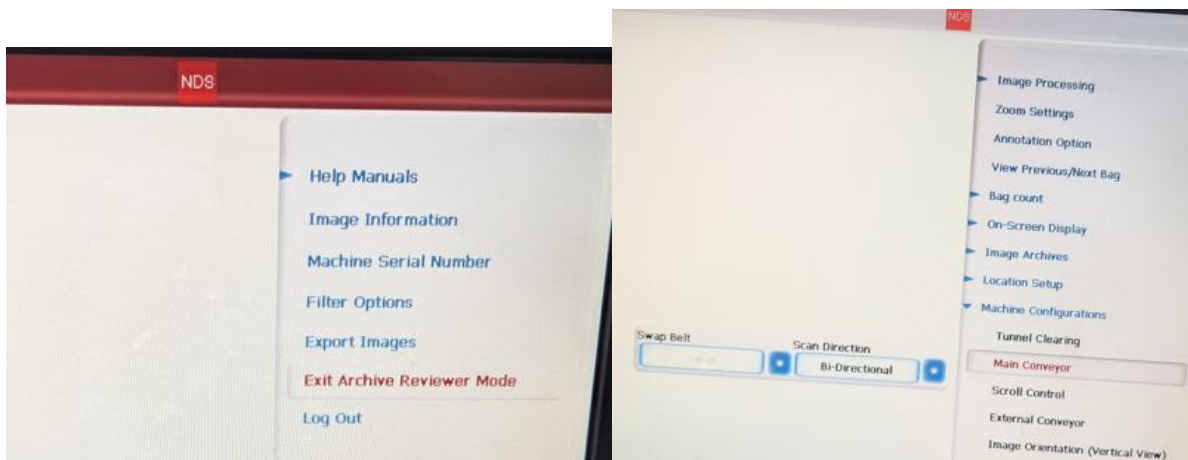

- Log out the program & turn the key back to shut down the PC

